



**Write the original key
through the NEC adapter**

CG-MB



Please insert the key into CG-MB device



Disassemble the key, take the chip out, and solder it to the NEC adapter

CGDI-MB OAS 2 18 104

Key Basic Information

SSID: [redacted] Position: [redacted]

Available times: [redacted] State: [redacted] **Activate**

Please Note

Smart key please choose 41 format, common key and BE key please choose 51 format!

When writing the original key, please make sure that it is wiped by the CGMB, otherwise the write will fail!

OK

Interface:

Infrared

NEC Adapter

567897061

Read Key/Chip

Reset

Open/Write


Current hash

Save BE File

00000000
00000010
00000020
00000030
00000040 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000050 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000060 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000070 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000080 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00000090 00 00 00 00 00 00 00 00 00 00 00 00 00 00

Reset operation succeed!

Click open/write, please note the prompt

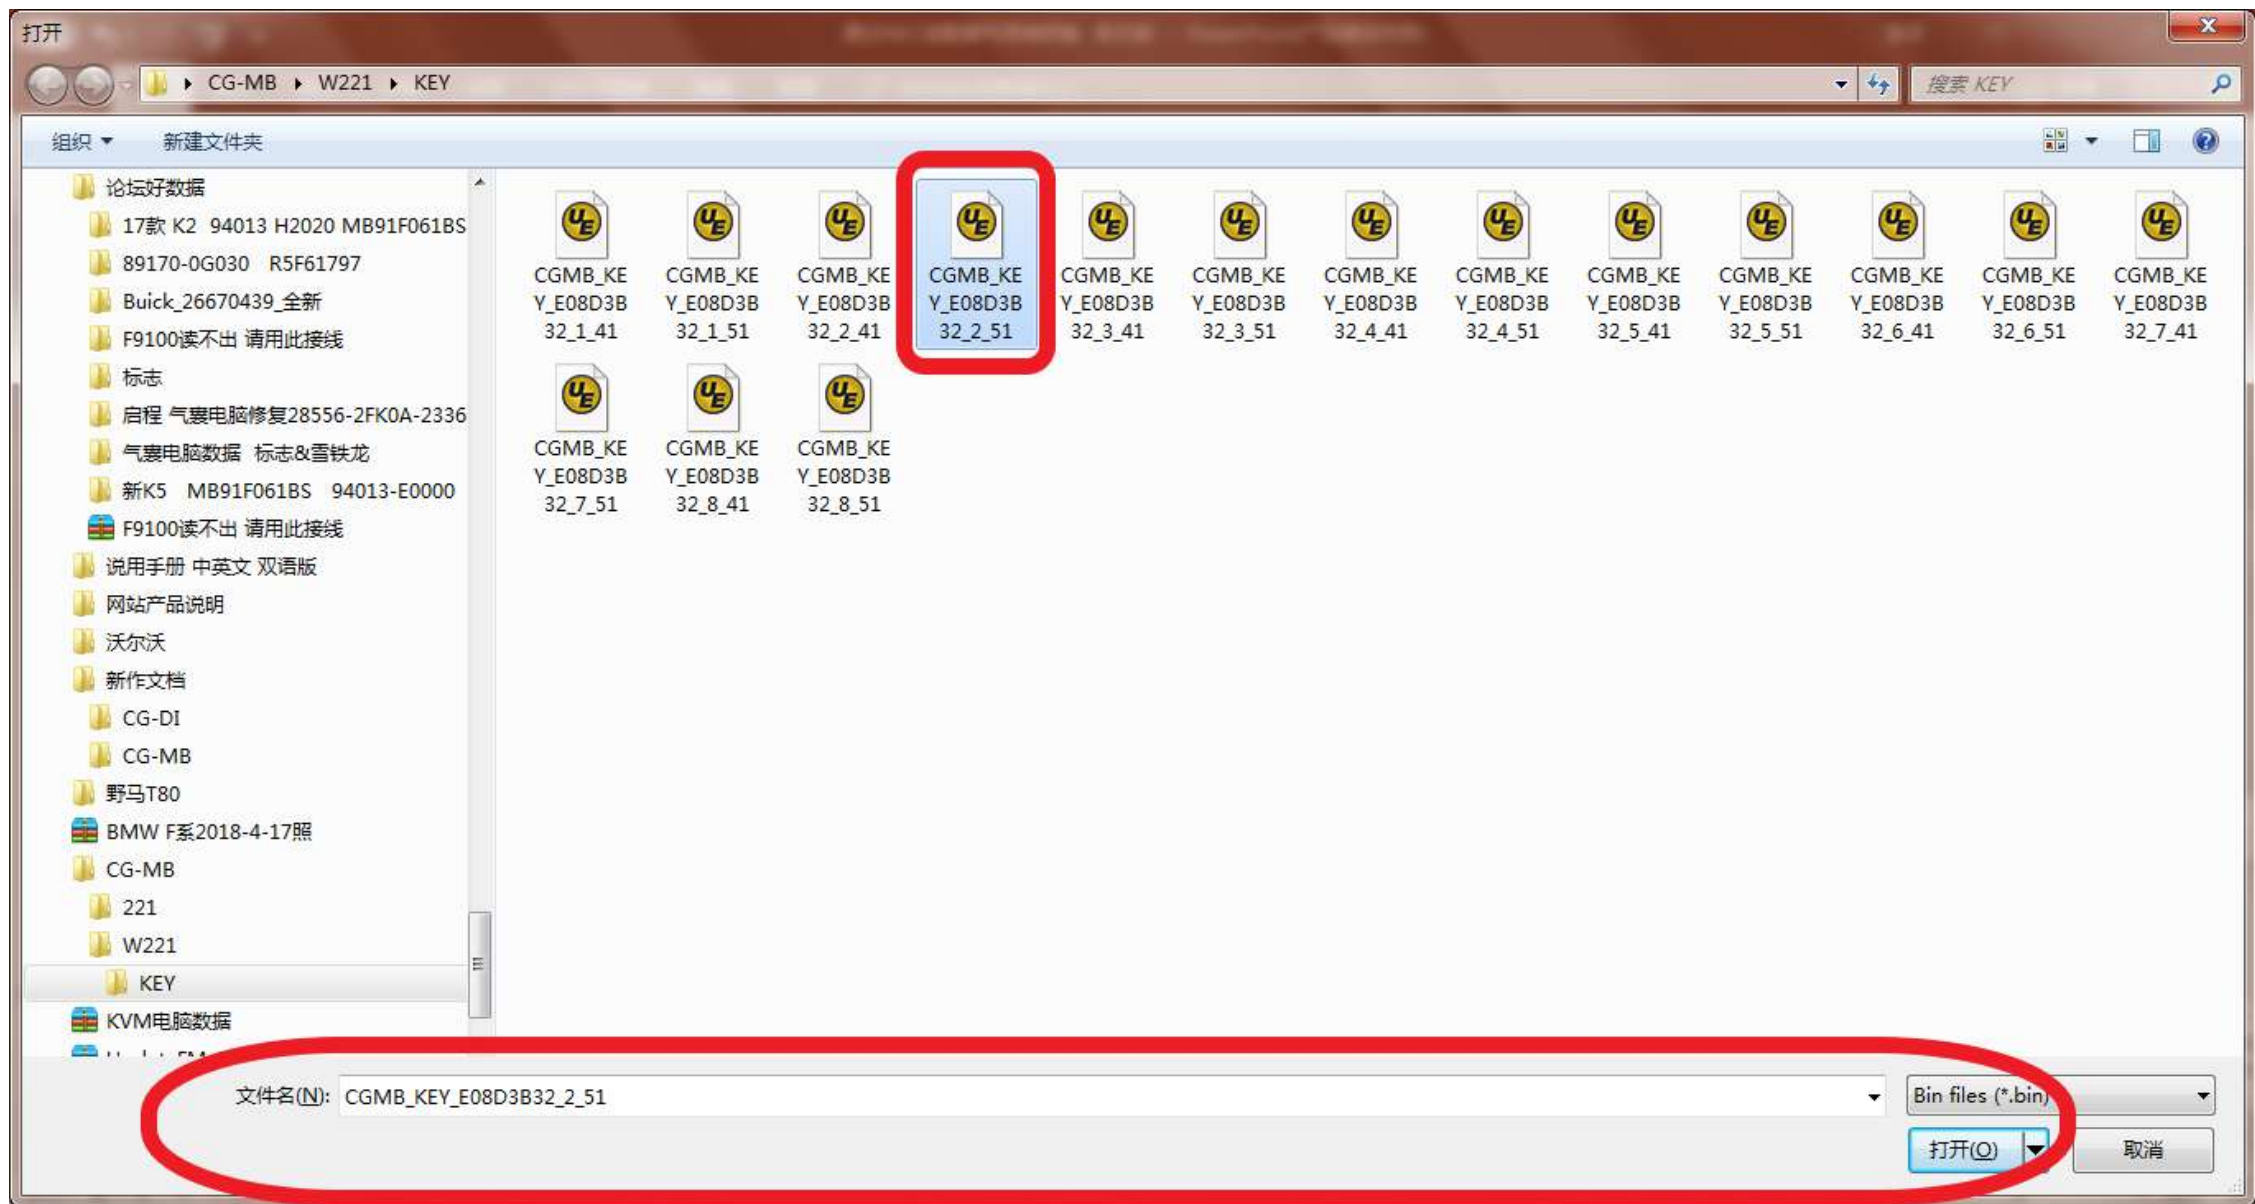

Choose—unused key position data, click and open it

EIS

Read/Write Key

Compute Password

Generate EE

Auto Computer

ELV

Key Basic Information

SSID	Position
Available times	State Activate
Times used	Copy
Key password	Copy

00000000	00 00 00 00 00 00	00 00 00 00 00 00
00000010	00 00 00 00 00 00	00 00 00 00 00 00
00000020	00 00 00 00 00 00	00 00 00 00 00 00
00000030	00 00 00 00 00 00	00 00 00 00 00 00
00000040	00 00 00 00 00 00	00 00 00 00 00 00
00000050	00 00 00 00 00 00	00 00 00 00 00 00
00000060	00 00 00 00 00 00	00 00 00 00 00 00
00000070	00 00 00 00 00 00	00 00 00 00 00 00
00000080	00 00 00 00 00 00	00 00 00 00 00 00
00000090	00 00 00 00 00 00	00 00 00 00 00 00

Benz Monster

Write success!

确定

Interface:

Infrared

NEC Adapter

567897061

Read Key/Chip

Reset

Open/Write

Current hash

Save BE File

Write success!

Write success



Take the chip out,weld NEC adapter back the key, get on the car